

Key Operating Instructions

1. "Prev / V--" button: "Press" for switching previous song, "long press" for volume down
2. "Next/v++" button: "Press" for switching next song, "long press" for volume up.
3. "P / P / Mode" button: "Press" for the "Play/Pause" Switch, "long press" for USB disk, microSD mode.
4. "Repeat" button: "Press" for "single/all song" mode(no long press)

Note "Long press" approximate 2S.